



This antenna mounting bracket is designed for installation on these specific vehicles:

Chevrolet Suburban, Avalanche, Tahoe 2007-2013
Chevrolet Silverado 1500 2007-2013
Silverado 2500, 3500: 2007-2014
GMC Yukon, Yukon Denali: 2007-2013
GMC Sierra 1500: 2007-2013
GMC Sierra 2500, 3500: 2007-2014

***Note: Sierra 2500 & 3500, Silverado 2500, 3500 with diesel engines have a rubber seal under the hood edge that must be trimmed with a utility knife for correct fit of the bracket.**

Tools Required:

13mm socket and driver, or 13mm box end wrench

Install location:

Left front fender

Model#: CVANTPF




Please Read: Always check for continuity between the bracket and chassis ground. If there is a problem with grounding, place the provided star washer between the bracket and the fender.

Step 1) Set the parking brake. Open hood and locate 13mm bolt near the back of the front fender. Remove bolt.

Step 2) Align the antenna bracket with the bolt hole. Reinstall the bolt and tighten.

Step 3) Insert the NMO or required connector to mate with the antenna and tighten securely.

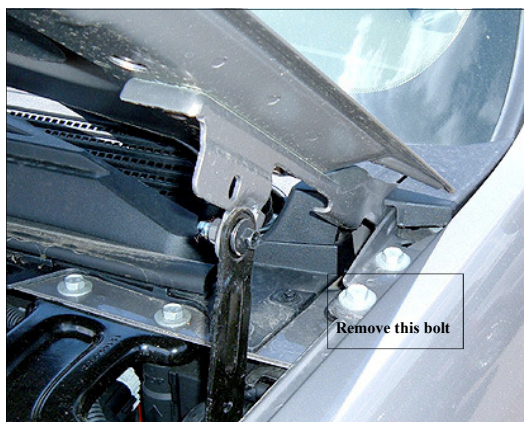

NCG Company may not be held liable for any damage to the vehicle before, during or after the installation or removal of this antenna bracket.
NCG may not be held liable for any personal injury resulting from accident or improper installation.



National Communications Group Co., Ltd
Chino, CA 800-962-2611
Fax: 909-393-6133
www.natcommgroup.com